



Changing the IP address

AXING Application Note

The network options are configured under the menu item SYSTEM OPTIONS.

- Use dynamic IP address to connect the device to a network with a DHCP server.
- Use a static IP address to connect the device to a network with a fixed IP address. The IP address, netmask and the gateway can be changed here. In addition, DNS server 1 and DNS server 2 can be entered.

STSTEM OPTIONS
Control IPTV
OUse dynamic IP address
IP address (0-255):
192 . 168 . 178 . 31
Netmask (0-255):
255 . 255 . 255 . 0
Gateway (0-255):
192 168 178 1
DNS Server 1 (0-255):
8 8 8 8
DNS Server 2 (0-255):
8 . 8 . 4 . 4
SAVE & REBOOT

Note: Some headend units have several interfaces. In this case, a separate tab is available for each interface (as shown).

- Click SAVE & Reboot to confirm and save the changes. When the changes are saved, the device will reboot automatically.
- The new IP address has to be entered in the web browser and the enter password dialog will be displayed.

Article as PDF.



AXING AG Gewerbehaus Moskau Telefon +41 52 - 742 83 00 Telefax +41 52 - 742 83 19

CH-8262 Ramsen info@axing.com www.axing.com

Technische Verbesserungen, Änderungen im Design, Druckfehler und Irrtümer vorbehalten. | Technical improvements, changes in design, printing- and other errors reserved.







AXING AG Gewerbehaus Moskau Telefon +41 52 - 742 83 00 Telefax +41 52 - 742 83 19

CH-8262 Ramsen info@axing.com www.axing.com

Technische Verbesserungen, Änderungen im Design, Druckfehler und Irrtümer vorbehalten. | Technical improvements, changes in design, printing- and other errors reserved.