



# Changing the IP address

## AXING Application Note

The network options are configured under the menu item **SYSTEM OPTIONS**.

- Use **dynamic IP address** to connect the device to a network with a DHCP server.
- Use a **static IP address** to connect the device to a network with a fixed IP address. The IP address, netmask and the gateway can be changed here. In addition, DNS server 1 and DNS server 2 can be entered.

SYSTEM OPTIONS

ControlIPTV

Use dynamic IP address

Use static IP address

IP address (0-255):

192	168	178	31
-----	-----	-----	----

Netmask (0-255):

255	255	255	0
-----	-----	-----	---

Gateway (0-255):

192	168	178	1
-----	-----	-----	---

DNS Server 1 (0-255):

8	8	8	8
---	---	---	---

DNS Server 2 (0-255):

 
8	8	4	4
---	---	---	---

SAVE & REBOOT

**Note:** Some headend units have several interfaces. In this case, a separate tab is available for each interface (as shown).


- Click **SAVE & Reboot** to confirm and save the changes.  
When the changes are saved, the device will reboot automatically.
- The **new IP address** has to be entered in the web browser and the enter password dialog will be displayed.

[Article as PDF.](#)





 Competence in  
Communication  
Technologies



AXING AG

Gewerbehäus Moskau

Telefon +41 52 - 742 83 00

Telefax +41 52 - 742 83 19

CH-8262 Ramsen

info@axing.com

www.axing.com

Technische Verbesserungen, Änderungen im Design, Druckfehler und Irrtümer vorbehalten. | Technical improvements, changes in design, printing- and other errors reserved.