



Changing the IP address

AXING Application Note

The network options are configured under the menu item **SYSTEM OPTIONS**.

- Use **dynamic IP address** to connect the device to a network with a DHCP server.
- Use a **static IP address** to connect the device to a network with a fixed IP address. The IP address, netmask and the gateway can be changed here. In addition, DNS server 1 and DNS server 2 can be entered.

SYSTEM OPTIONS

Control

IPTV

☐ Use dynamic IP address

☒ Use static IP address

IP address (0-255):

19216817831

Netmask (0-255):

2552552550

Gateway (0-255):

1921681781

DNS Server 1 (0-255):

8888

DNS Server 2 (0-255):


8844

SAVE & REBOOT

Note: Some headend units have several interfaces. In this case, a separate tab is available for each interface (as shown).

- Click **SAVE & Reboot** to confirm and save the changes.
When the changes are saved, the device will reboot automatically.
- The **new IP address** has to be entered in the web browser and the enter password dialog will be displayed.

[Article as PDF.](#)

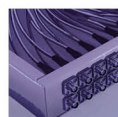


AXING AG
Gewerbehaus Moskau
Telefon +41 52 - 742 83 00
Telefax +41 52 - 742 83 19

CH-8262 Ramsen
info@axing.com
www.axing.com



Competence in
Communication
Technologies

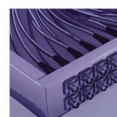

AXING AG
Gewerbehaus Moskau
Telefon +41 52 - 742 83 00
Telefax +41 52 - 742 83 19

CH-8262 Ramsen
info@axing.com
www.axing.com

Technische Verbesserungen, Änderungen im Design, Druckfehler und Irrtümer vorbehalten. | Technical improvements, changes in design, printing- and other errors reserved.