



 
# Save or upload Initialization Data

## AXING Application Note

### Save Initialization Data

In the section save system initialization data to file you can save the current initialization data from phase 1 to 3 into a file on your computer. In addition, a PDF can be created with the initialisation settings.

#### SAVE SYSTEM INITIALIZATION DATA TO FILE

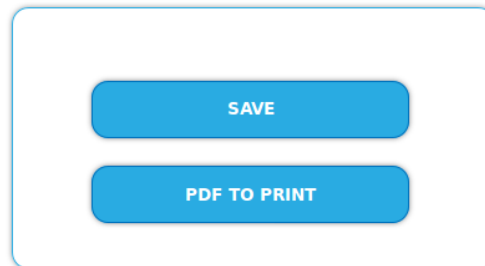



- Click on SAVE, the data is offered to you for saving as a config.dat file.
- Click on PDF TO PRINT, a PDF is generated and offered as Config.pdf for opening or saving.

**Note:** Password and IP adress will not be saved.

### Upload Initialization Data

  In the section upload system initialization data from file you can upload the initialization data from a file to the modul.

#### UPLOAD SYSTEM INITIALIZATION DATA FROM FILE

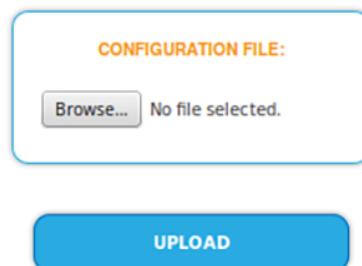




Competence in  
Communication  
Technologies

- Choose a configuration file.
- Click on upload.  
The upload will take a few seconds.

 [Article as PDF](#)



AXING AG  
Gewerbehäus Moskau  
Telefon +41 52 - 742 83 00  
Telefax +41 52 - 742 83 19

CH-8262 Ramsen  
info@axing.com  
www.axing.com