




## Save or upload Initialization Data

### AXING Application Note

#### Save Initialization Data

In the section save system initialization data to file you can save the current initialization data from phase 1 to 3 into a file on your computer. In addition, a PDF can be created with the initialisation settings.

#### SAVE SYSTEM INITIALIZATION DATA TO FILE

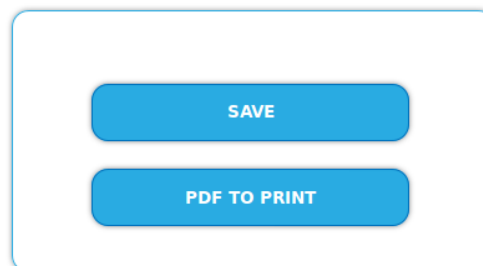


- Click on SAVE,  
the data is offered to you for saving as a config.dat file.
- Click on PDF TO PRINT,  
a PDF is generated and offered as Config.pdf for opening or saving.

**Note:** Password and IP adress will not be saved.

#### Upload Initialization Data

In the section upload system initialization data from file you can upload the initialization data from a file to the modul.

#### UPLOAD SYSTEM INITIALIZATION DATA FROM FILE

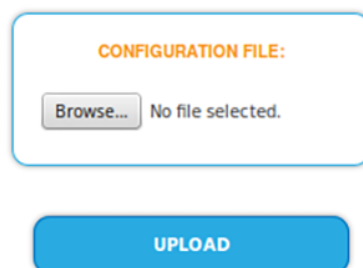




Competence in  
Communication  
Technologies

- Choose a configuration file.
- Click on upload.  
The upload will take a few seconds.

 [Article as PDF](#)



AXING AG  
Gewerbehaus Moskau  
Telefon +41 52 - 742 83 00  
Telefax +41 52 - 742 83 19

CH-8262 Ramsen  
[info@axing.com](mailto:info@axing.com)  
[www.axing.com](http://www.axing.com)

Technische Verbesserungen, Änderungen im Design, Druckfehler und Irrtümer vorbehalten. | Technical improvements, changes in design, printing- and other errors reserved.