



Update software

AXING Application Note

Take note:


During the update and reconfiguration, the modulator outputs are switched off. Therefore, no reception is possible for the participants.

Download

You can find software updates in the [download area](#). Download the current version to your PC and unpack it.


Update

New software for the graphical user interface can be installed under Software File

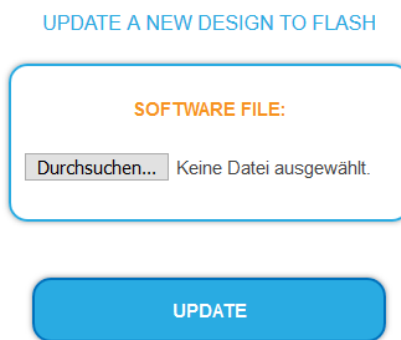

- Click under Software File on „Browse...“.
- Browse for the file on your computer.
- Click on Update.

 The file is uploaded to the unit. The upload progress is displayed.




System Reconfiguration

After the upload the reconfiguration of the device begins automatically.





SYSTEM IS RECONFIGURING

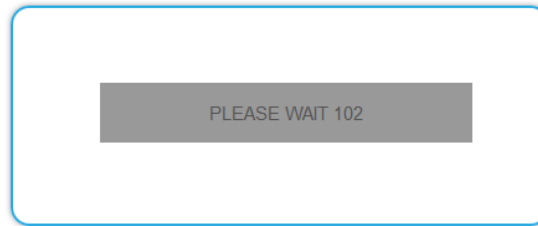

The remaining time ist shown in seconds. The headend will be automatically rebooted after the reconfiguration (setted parameters will not be lost).

[Article as PDF.](#)

