




## Single cable technology

### Single cable technology

The single cable technology is used (in contrast to the classic multi-switch technology) where several receivers are to be operated independently of one another on a single common coaxial line. There are two standards:

- EN50494 for up to 8 users / receivers (also SATCR (Satellite Channel Router) or also SCD (Single Cable Distribution))
- EN50607 for up to 32 users / receivers (also JESS (Jultec Enhanced Stacking System) or also SCD2 (Single Cable Distribution Version 2))

Each receiver is assigned a so-called user band on the common coaxial line. The user band is a frequency resource with a certain bandwidth and numbered with an identification (user band ID). The combination of center frequency and ID is determined by the converter (= single cable multi-switch) and must be entered correctly once in the receiver (TV, STB or measuring device). The receiving part of the receiver remains permanently tuned to the user band frequency.

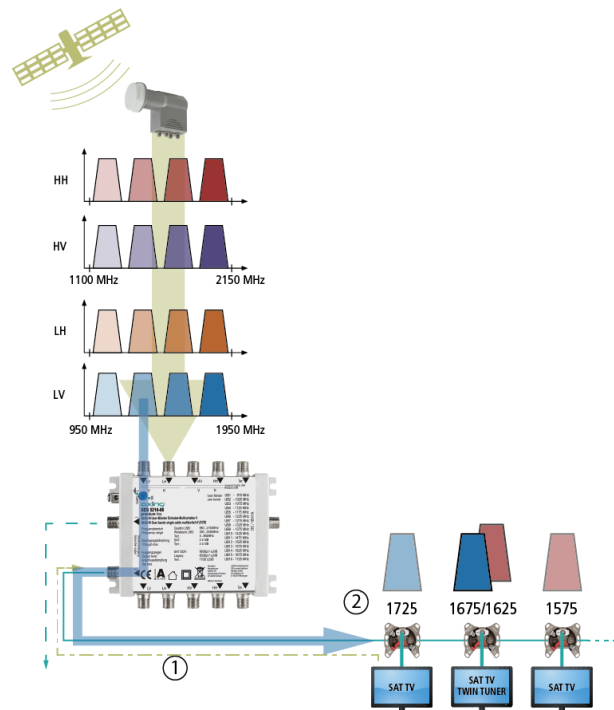


The receiver uses special DiSEqC commands with its user band ID to tell the converter (1) which program (i. e. which polarization and which center frequency of the desired satellite transponder) the single cable converter must put into the assigned user band of the receiver (2).

### Important:

The combination of user band ID and frequency is not standardized and therefore manufacturer-dependent!

Each user band ID number may only be used once per multi-switch output / coaxial line.

Due to the nature of the system, single cable setups are not suitable for multi-apartment installations without special measures. This is only possible in connection with the special, programmable antenna sockets (for example AXING SSD 6-x).

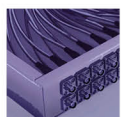

AXING AG

Gewerbehau Moskau

Telefon +41 52 - 742 83 00

Telefax +41 52 - 742 83 19

CH-8262 Ramsen


info@axing.com

www.axing.com



Competence in  
Communication  
Technologies

If the user band frequencies in a system are not known or if you do not want to enter them manually, the UB frequencies can be read out or automatically found, respectively, by the MG 1-00 measuring device (see MG 1-00 operating instructions).

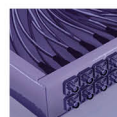

AXING AG

Gewerbehäus Moskau

Telefon +41 52 - 742 83 00

Telefax +41 52 - 742 83 19

CH-8262 Ramsen

info@axing.com

www.axing.com

Technische Verbesserungen, Änderungen im Design, Druckfehler und Irrtümer vorbehalten. | Technical improvements, changes in design, printing- and other errors reserved.